

## TRELLIS MOUNT KIT INSTALLATION INSTRUCTIONS

## **Kit Contents**


- 4 9/16" Phillips Screws
- 4 1-1/4" Phillips Screws
- 4 Plastic Anchors
- 4 Metal Brackets

## **Materials Needed**


- Pencil
- Power drill with 1/4" Phillips bit
- 1/4" Masonry bit (if needed)

Attach the brackets to the fence or wall on each mark.


\*If using an anchor, predrill a 1/4" hole, 1-1/2" deep.

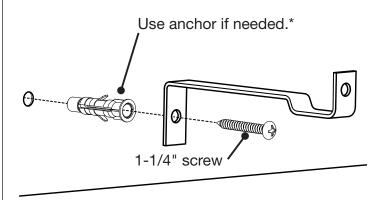

1 Mark the trellis bracket locations.

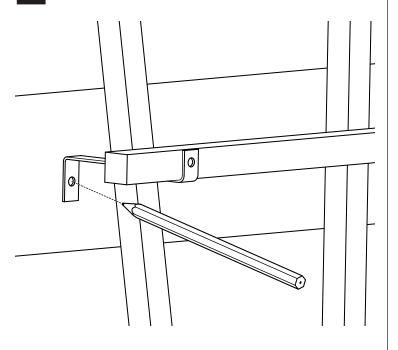

3 Attach the trellis to the brackets.

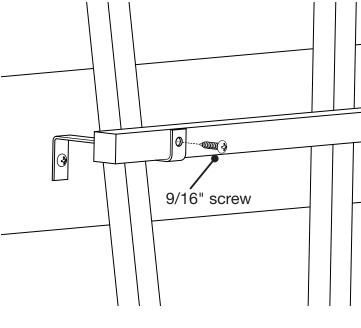

THE DIAGRAMS AND INSTRUCTIONS IN THIS BROCHURE ARE FOR ILLUSTRATION PURPOSES ONLY AND ARE NOT MEANT TO REPLACE A LICENSED PROFESSIONAL. ANY CONSTRUCTION OR USE OF THE PRODUCT MUST BE IN ACCORDANCE WITH ALL LOCAL ZONING AND/OR BUILDING CODES. THE CONSUMER ASSUMES ALL RISKS AND LIABILITY ASSOCIATED WITH THE CONSTRUCTION OR USE OF THIS PRODUCT. THE CONSUMER OR CONTRACTOR SHOULD TAKE ALL NECESSARY STEPS TO ENSURE THE SAFETY OF EVERYONE INVOLVED IN THE PROJECT, INCLUDING, BUT NOT LIMITED TO, WEARING THE APPROPRIATE SAFETY EQUIPMENT. EXCEPT AS CONTAINED IN THE WRITTEN LIMITED WARRANTY, THE WARRANTOR DOES NOT PROVIDE ANY OTHER WARRANTY, EITHER EXPRESS OR IMPLIED, AND SHALL NOT BE LIABLE FOR ANY DAMAGES, INCLUDING CONSEQUENTIAL DAMAGES.